



GOOD DESIGN




ATTACK 350 RIPPLE PALETTE

Compact 40cm square tiles. 13 basic solid colors and 4 dynamic striped patterns are available.

category: fabric floor

Fabric Floor

Composition	surface	Polypropylene 100%	dyeing method of yarn	Solution Dyed	
	base fabric	Nonwoven Polyester	backing	SOFT BACK Q (self-adhesive backing)	
Specification	size	400mm×400mm	overall thickness	10.0mm	
	pile height	H5.0mm / L3.0mm (multi-level loop pile)			
	gauge	1/8	stitch	14.0	yarn weight (oz/sq.yd)
Packing	10pcs/box = 1.6m ² /box				
Net Weight	7.7kg/box				
Minimum Order Quantity	More than 10pcs (Multiple colors can be mixed within one same order.)				
Performance	Flame-retardant	Fire Defense Law in Japan Authorized No.E0040196			
	Antistatic	Less than 3.0kV (JIS L 1021-16, at 23 degrees centigrade, 25%RH)			
	Sound Insulation	excellent			
	Formaldehyde Radiation	F☆☆☆☆ Interior-fabrics Performance Evaluation Conference Certified No. J05-30289			
Way of Installation	 Quarter Turn				
Recommended Adhesive from TOLI	Self-adhesion	on the top of wood floor, vinyl floor, and ceramic tile etc. with a flat surface	No need to apply the adhesive.		
	Entire adhesion	concrete, mortar, and wooden sub-floor (such as plywood)	TOLI ECO GA Cement		
Notes on Installation	<ul style="list-style-type: none"> ◆TOLI FABRIC FLOOR has a self-adhesive backing, due to which each tile can be installed on the existing wood floor, vinyl cushion floor, etc. without using any adhesive. ◆Adhesion strength of FABRIC FLOOR may differ according to the type of existing floor covering. Please check how it works with a sample tile in advance. ◆After you open the carton box of TOLI FABRIC FLOOR, small fabric dusts could be seen around the edge of a tile. This has nothing to do with the quality of the product. Just remove them before installation. ◆After you remove FABRIC FLOOR, sometimes the floor surface might become slippery. In that case, wipe the floor sufficiently with a rag soaked in neutral detergent. Afterwards remove the detergent left on the floor surface. Then it will be recovered. ◆Also when you use FABRIC FLOOR on the wax-coated existing floor, the trace of the absorbent material on the backing may temporarily leave on the floor surface. That will disappear with the passage of time. (Please bear in mind that on some types of wax coating the trace may not be easily disappear.) ◆When you install TOLI FABRIC FLOOR like an area rug, FF Border and FF Corner Joint will be of your help to deal with the level difference on the edges. ◆When you glue down TOLI FABRIC FLOOR entirely on the sub-floor, dilute TOLI ECO GA Cement with water (2 to 1) and apply as the adhesive. After drying, when the adhesive becomes perfectly transparent, install the tiles. Be careful not to put the tiles too tightly. 				
Others	<ul style="list-style-type: none"> ◆TOLI FABRIC FLOOR is designed for residential use. Other commercial applications such as retail, office, and hospitality should be avoided. Please bear in mind that the product quality cannot be assured in case of the installation other than residential use. ◆When you wash the tiles in the bathroom, please run a ventilation fan. Otherwise the indigenous odor of the product will remain. ◆The product has the indigenous odor from its materials. Ventilate the room from time to time. 				

MADE IN JAPAN



AK3581RS
(Stripe pattern of AK3515, AK3516, and AK3518.)



AK3582RS
(Stripe pattern of AK3515, AK3518, and AK3523.)



AK3583RS
(Stripe pattern of AK3515, AK3516, and AK3522.)



▲ AK3523/AK3582RS



GOOD DESIGN



ATTACK 350 RIPPLE PALETTE

category: fabric floor



Fabric Floor



▲ AK3502/AK3515



|| AK3515



|| AK3517



|| AK3525



|| AK3518




|| AK3516



|| AK3519



|| AK3501

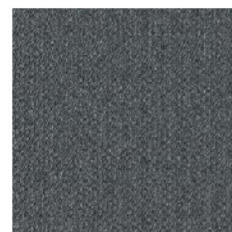

|| AK3502



|| AK3523



|| AK3522



|| AK3526



|| AK3520



|| AK3527